

The adapter is powered via the ISDN connector when used with the WorldCommunicator. No external power is then required.

If the adapter is used with a standard wall ISDN outlet, external power is required.